


Bug Controls:

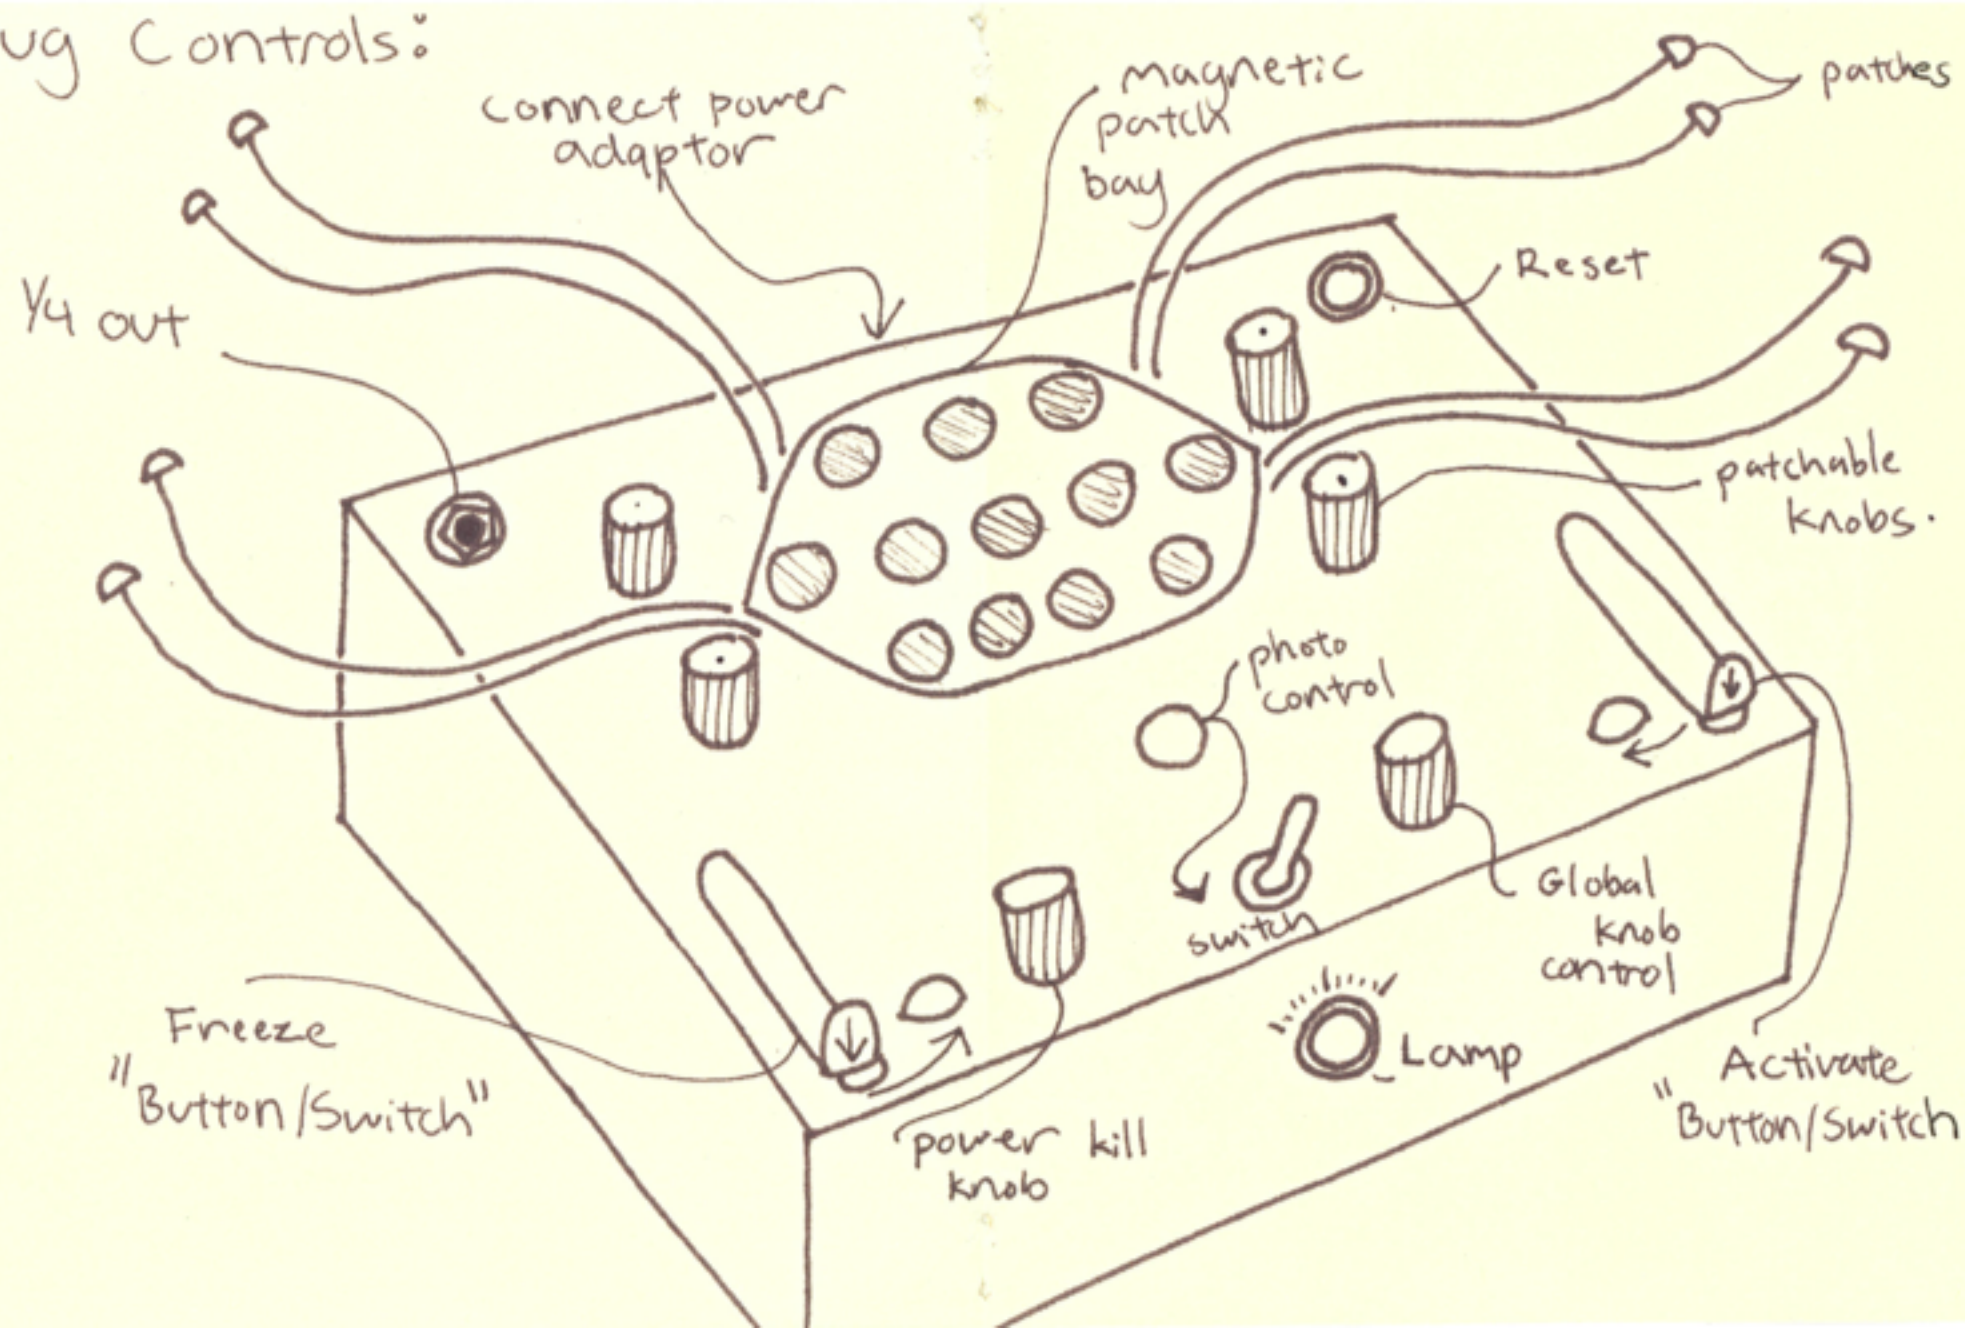

To Begin:

1. Connect power supply
2. 1/4 inch out to amp (volume low)
3. No patches connected (hang them off the back)
4. Power kill knob full (Front green light brightest)
5. "Switch" Activate
6. Press reset button then tap freeze "button" till chatter(audio)
7. Patch and twist knobs.....
Knobs are very sensitive a small turn can change sound drastically, twist slowly:)