

Operating Instructions

To Play Bird Songs

1. Turn on the iFlyer BirdSong Scanning Wand by pressing and holding the ON/OFF button (1) for one second. The Power Indicator LED light (2) will glow red.
2. Press the Scanning Trigger Button (3). The LED will flash and you will have 10 seconds to swipe the bar code until the LED stops flashing.
3. To play a song - select a bird from the BarCode ScanBook and place the tip of the wand close to the bar code and swipe the point (4) of the wand across the bar code. (Note: You can scan from either direction, left to right or right to left)
4. Once the song is finished, the LED will flash for 10 seconds allowing you to swipe the wand along another bar code. When the LED light stops flashing after 10 seconds, you will need to press the Trigger Button (3) again to play another song. Holding the Trigger Button down will allow you to continue to play bar codes for as long as the button is pressed.

