 
 



instant
cartridge
load

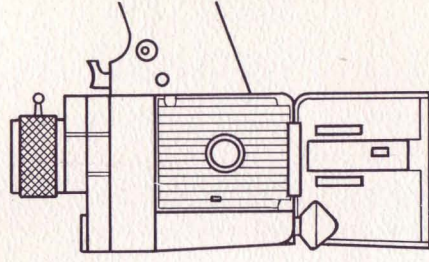

1 OPEN

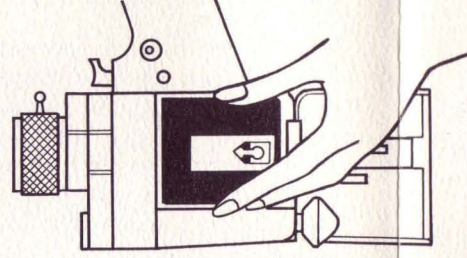

 2 DROP IN—CLOSE DOOR

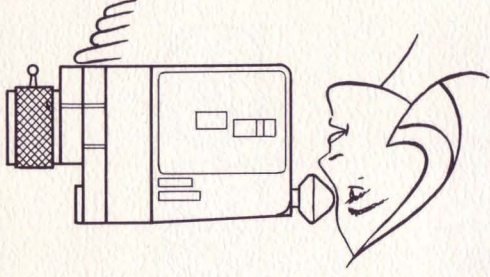

3 SHOOT!

MODEL 807 ZOOM LENS

Super Eight
Instant Load
TTL Electric Eye
Movie Camera

MODEL 808 POWER ZOOM

TIPS FOR BETTER MOVIES

- Plan your movies in advance to add a feeling of continuity. Film your scenes in a story-telling sequence. Make your shortest "takes" at least five seconds.
- For near subjects, 4 to 8 feet from camera, keep the ZOOM LEVER set on WIDE. Sharpest full range zooms, from WIDE to TELE are obtained when subject is situated 8 feet from camera or beyond.
- Take pictures with the sun behind your back whenever possible. The electric eye can "read" the scene and set the lens more accurately if this rule is followed.
- When using a movie light keep subject closer to the background than to the camera to assure even overall lighting.
- If you film a scene by "panning" (moving the camera horizontally or vertically while shooting), keep the movement very slow to avoid blurring and jerkiness in your projected pictures.

Printed in Japan

SERVICE

ARGUS SERVICE COMPANY
IN CANADA

ARGUS SERVICE COMPANY
3325 Platt Springs Road
West Columbia
South Carolina 29169

826 Davis Drive East
Newmarket, Ontario

Argus Cameras of Canada, Ltd.
Newmarket, Ontario
Argus Ltd.
Shiba, P. O. Box 59, Tokyo

Argus Incorporated
3325 Platt Springs Road
West Columbia
South Carolina 29169



 
Your Argus product is guaranteed to function for a period of one year from the date of original purchase. If during this period, your product fails to operate for any reason, Argus Incorporated will restore it to normal operating condition. This guarantee applies to the product itself. We regret that we are unable to assume liability for loss of film or for any other expense. This guarantee is valid only for the original retail purchaser and only if the product is returned insured, prepaid with \$1.00 for handling directly or through an Argus dealer, to an Argus Service Company location, or one of its Authorized Service Stations. The date and place of original purchase must be included. Along with a description of the difficulties encountered. For the address of the nearest service location, contact your Argus dealer or write to the main office of the Argus Service Company. Many apparent product difficulties are actually a matter of incorrect usage. It is always wise to see your Argus dealer before returning the product for servicing.

GUARANTEE

important functional parts of your argus 807-808

TTL ELECTRIC EYE
INSTANT LOAD SUPER 8

- A ZOOM LENS
- B ZOOM LEVER
- C SHUTTER-RELEASE BUTTON
- D LIGHT SOCKET
- E POWER ZOOM BUTTON
- F FOOTAGE COUNTER
- G DOOR RELEASE BUTTON
- H LOCK BUTTON
- I PISTOL GRIP
- J BATTERY COMPARTMENT COVER

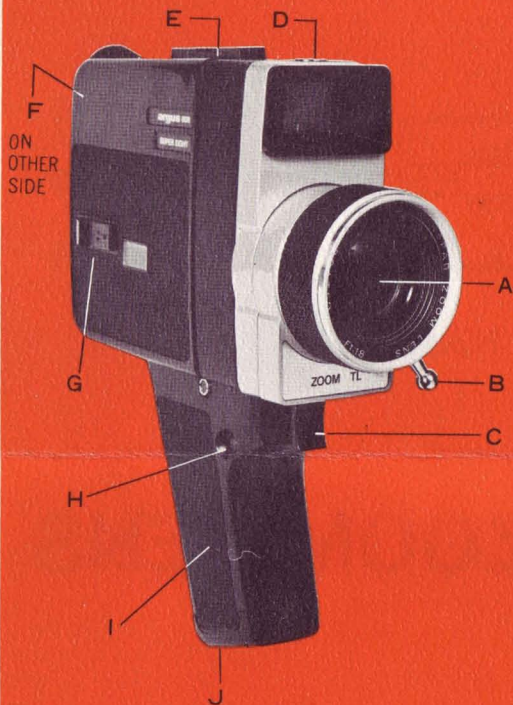


BATTERY INSTALLATION

Remove the battery compartment cover. Install four 1.5volt "AA" penlite batteries according to diagram inside grip. Improper installation will prevent camera from operating properly. For maximum efficiency use Alkaline Type batteries. The red dot in the battery compartment shows the location of the battery that powers the CdS through-the-lens electric eye. The other three slots accept batteries that drive film. Clean contacts periodically with a pencil eraser or rough cloth. Batteries should be removed from camera if it is not to be used for a long period of time.



ZOOM 807

 Wide angle to telephoto zooms are accomplished by placing thumb or index finger on the ZOOM LEVER and slowly rotating up for a TELE close-up or down to WIDE angle coverage. Practice this operation several times until zoom action is smooth and professional.

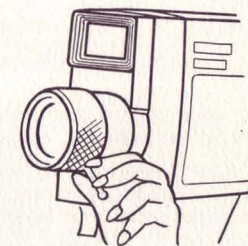


ZOOM 808

POWER ZOOM BUTTON on top of camera will operate independent of shutter release button. Depressing front of button marked TELE will zoom in for a closer view, whereas back of button marked WIDE will zoom lens to wide angle coverage. Speed of zooming can be varied with the manual ZOOM LEVER.



AUTOMATIC EXPOSURE

 
The TTL Electric Eye of your camera will automatically and continuously adjust the lens for proper film exposure. Grip the camera firmly and sight through the viewfinder eyepiece. If the needle is in the red area, it indicates insufficient light for proper picture taking.

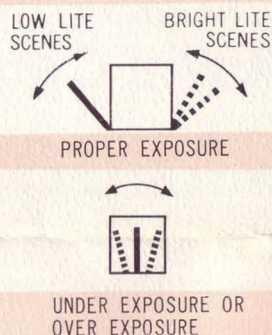

FOOTAGE COUNTER

Film is completely exposed when counter indicates 50 feet. Removal of the cartridge before film is completed is not recommended as counter will reset to zero.

 NOTE: For best results, have film processed as soon as possible.

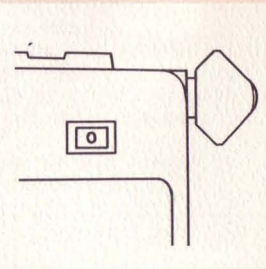

LOCK BUTTON

Depress white Lock Button on pistol grip before operating camera. When picture taking is over press red button to OFF position to prevent accidental start of camera.

