


argus

Lady Carefree

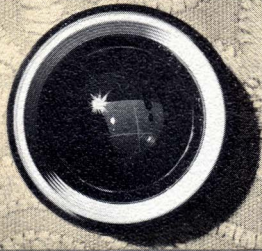

CAREFREE PICTURE FUN

FILM

Your Argus "Lady Carefree" camera accepts all 12 or 20 exposure Size 126 INSTANT LOAD cartridges except type rated ASA 160. When purchasing film specify if COLOR PRINTS, SLIDES, or BLACK AND WHITE prints are desired. Your camera will produce beautiful pictures with all three.

BATTERIES

Open door and install two PX-825 batteries in slots as shown. Replace about once a year with **fresh** batteries or every 500 flash exposures, whichever comes first. Clean battery contacts occasionally with a rough cloth or pencil eraser to maintain electrical contact.



READY TO USE IN SECONDS

INSTANT
CARTRIDGE
LOADING



LOADING

To load simply drop in the INSTANT LOAD cartridge. Close and press DOOR shut. Rotate FILM ADVANCE WHEEL until No. 1 stops automatically (same number may repeat several times in the FILM WINDOW). Do not remove CARTRIDGE until it is entirely exposed. Type of film also appears in the FILM WINDOW as a handy reference.

UNLOADING

FILM ADVANCE WHEEL will rotate freely when the last picture has been taken. Continue rotating until all the X's disappear in the FILM WINDOW. Open DOOR and lift out cartridge. Reload for more picture taking fun.

**PRESS TRIGGER
RELEASE DOWN TO
SNAP PICTURE**



FLASHCUBE



SUNLIGHT PICTURES

The Argus 164L requires no lens settings. Best results are obtained on SUNNY or Hazy BRIGHT days. Keep sun to your back and subject at least four feet from camera. Sharpest pictures will be obtained by gripping camera firmly and pressing TRIGGER RELEASE slowly. Compose and shoot.

FLASH PHOTOGRAPHY

 
Insert a FLASHCUBE into the FLASHCUBE SOCKET, one side forward. Cube rotates automatically each time you wind the film. Rotate film advance wheel beyond audible click (when cube stops) until a full stop is reached. Keep subject 4 to 9 feet from camera for best flash results. Use flash for snapshots on dull days, in shaded areas, and for indoor pictures.



2 Insert **CARTRIDGE**.

3 Snap **DOOR** shut.

4 Rotate **FILM ADVANCE WHEEL** until No. 1 stops in **WINDOW**.



5 **Sight**
and shoot.



1 Press to
open **DOOR**.

6 Advance to next exposure.

7 Rotate **WHEEL** past last exposure until **X's** disappear. Remove **CARTRIDGE**.

UNCONDITIONAL GUARANTEE

Your Argus product is unconditionally guaranteed to function for a period of one year from the date of original purchase. If, during this period, your product fails to operate for any reason, Argus Incorporated, will restore it to normal operating condition at no charge. This guarantee applies to the product itself. We regret that we are unable to assume liability for loss of film or for any other expense.

This guarantee is valid only for the original retail purchaser and only if the product is returned pre-paid directly or through an Argus dealer, to an Argus Service Company location, or one of its Authorized Service Stations. The date and place of original purchase must be included, along with a description of the difficulties encountered. For the address of the nearest service location contact your Argus dealer or write to the main office of the Argus Service Company.

Many apparent product difficulties are actually a matter of incorrect usage. It is always wise to see your Argus dealer before returning the product for servicing.

ARGUS SERVICE COMPANY, a Division of Argus Incorporated
MAIN OFFICE: 2090 Lunt Avenue, Elk Grove Village, Ill. 60007
IN CANADA: 826 Davis Drive East, Newmarket, Ontario



Argus Incorporated
5950 Touhy Avenue
Chicago, Illinois 60648

Argus Cameras of Canada, Ltd.
Newmarket, Ontario