

GOPHER

Thank you for purchasing this product from Gopher.






If you are not satisfied with any Gopher purchase for any reason at any time, contact us and we will replace the product, credit your account, or refund the purchase price.

Read instructions in their entirety. In the event of missing parts, call **1-800-533-0446**.






PADDLEPRO[®] Net Assembly Instructions

Parts List:

Part	Quantity	Description
1	2	End Base
2	2	Elbow Support Beam 31"
3	1	Support Beam 32"
4	2	Net Support Beam 36"
5	1	Net
6	1	Support Beam 32"
7	4	Support Beam 38"
8	1	Middle Support Base and Push Pin Support Beam 11"
9	1	Net Support Rod 32"
10	1	Storage Bag

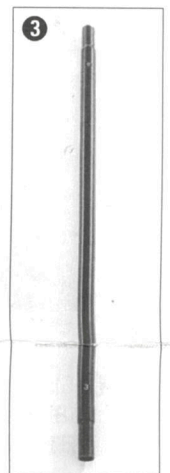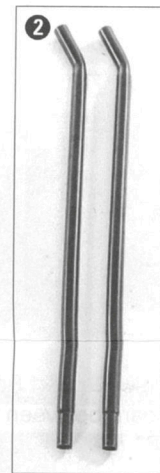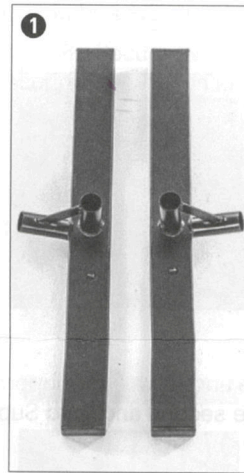


* Parts are numbered with the exception of parts 5, 9, and 10.

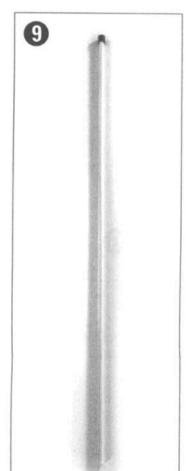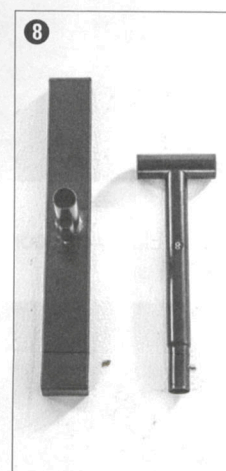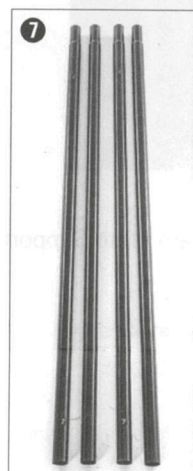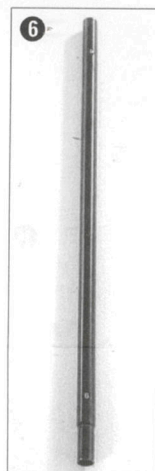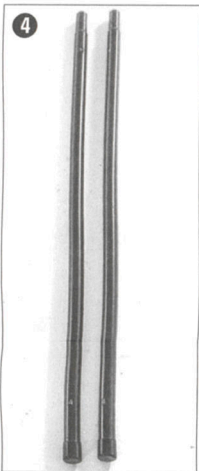


Assembly Instructions

1 Begin assembly of base frame first. Work from one end to the other in the following sequence:


A Set one End Base (1) on floor. Connect with one Elbow Support Beam (2).

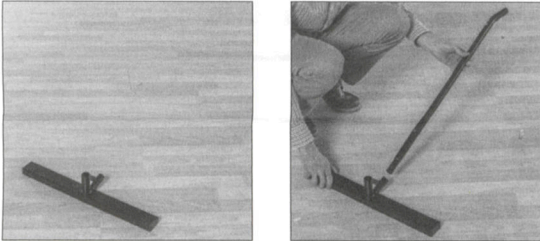

B Connect Support Beam 32" (6) with Elbow Support Beam (2). Continue by connecting two Support Beams 38" (7).

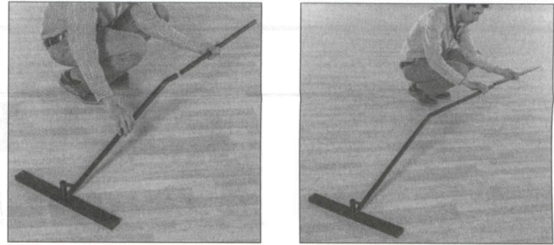


C Connect Push Pin Support Beam (8) with Middle Support Base (8). Slide base over the end of second attached Support Beam 38" (7).

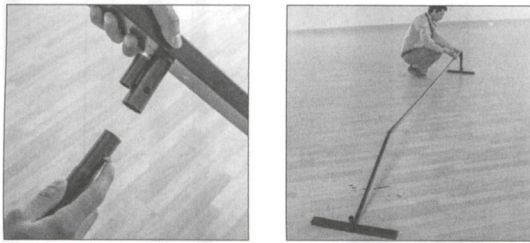

D Continue connecting remaining two Support Beams 38" (7).



E Slide Middle Support Base and Push Pin Support Beam (8) over seam between the second and third Support Beams 38" (7).

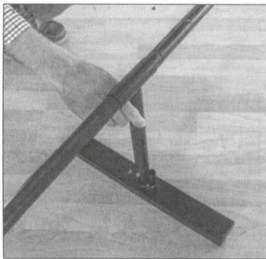


F Connect Support Beam 32" (3) to end of Support Beam 38" (7).



G Attach remaining Elbow Support Beam (2) to Support Beam 32" (3).




H Attach remaining End Base (1) to Elbow Support Beam (2).

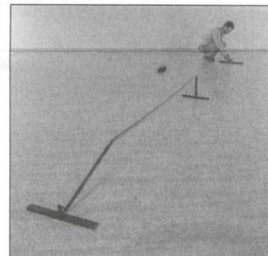


GOPHER

- 2 Place one Net Support Beam (4) into each End Base (1).

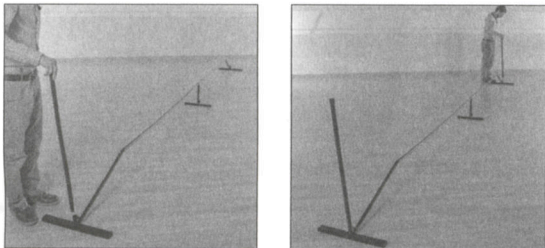


- 3 Slide one sleeve of Net (5) halfway on one Net Support Beam (4). Ensure Velcro® is on the top side.

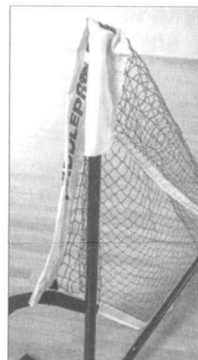


- 4 Extend net to opposite side, slide halfway over remaining Net Support Beam (4). Slide net down on both sides until there is a 1/2" gap between top of net and top plug of the support beam.

- 5 Insert Net Support Rod (9) into slot on Middle Support Base (8). Secure by inserting top of rod into Net (5) and securing Velcro® on attached strap.

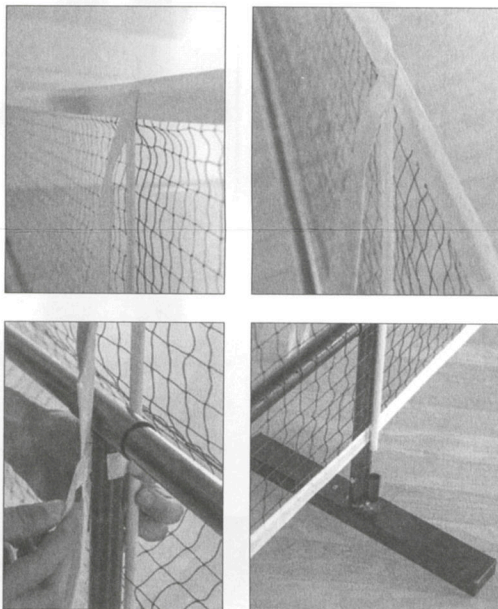

- 6 Use Velcro® to stretch and secure Net (5) to Net Support Rod (9).

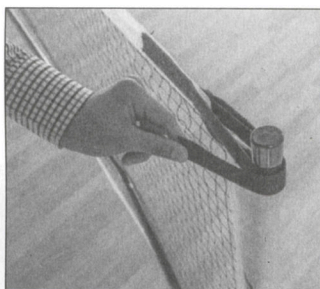

- 7 Assembly of your PaddlePro™ Net is now complete.

